



Pos.	Type	Type	Pos.	Type	Type
01	MS 11	A01	12	MS 214	A12
02	MS 12	A02			
03	MS 13	A03			
04	MS 14	A04			
05	MS 21	A05			
06	MS 22	A06	13	MS 224	A13
07	MS 212	A07			
08	MS 222	A08			
09	MS 23	A09			
10	MS 213	A10			
11	MS 24	A11	14	MS 25	A14
			15	MS 26	A15
			16	MS 0	A98
			17	Contact-arrangement special	A99
			18	Contact in 0-position normally closed (NC) Additional code - 0	A...0
			19	Contact in 0-position normally open (NO) Additional code - 1	A...1
			20	Potentiometer MSP	

